

DT Lite Product Information

DT Lite Firmware Flashing

The DT Lite terminal works under various working mode such as hotel and residential. You can change the working mode from hotel to residential with the firmware cards or vice versa.

OPERATION

Change hotel working mode to residential mode

1. Take the Authorization Card in front of the DT Lite reader until sounds a short “beep” and LED blue lights, remove the Authorization Card;
2. Within 5 seconds put the DT Lite Hotel Firmware Card #1 on the reader until LED red and blue flash alternately, keep it in the position until sounds a short “beep” and LED red lights, remove the card #1;
3. Put the DT Lite Firmware Hotel Card #2 on the reader until LED red and blue flash alternately again, keep it in the position until sounds a short “beep” and the LED blue lights, then light off

The Firmware Flashing was successful.

OPERATION

Change residential working mode to hotel mode

1. Take the Programming Card in front of the DT Lite reader until sounds a short “beep” and LED blue lights, remove the Authorization Card;
2. Within 5 seconds put the DT Lite Hotel Firmware Card #1 on the reader until LED red and blue flash alternately, keep it in the position until sounds a short “beep” and LED red lights, remove the card #1;
3. Put the DT Lite Firmware Hotel Card #2 on the reader until LED red and blue flash alternately again, keep it in the position until sounds a short “beep” and the LED blue lights, then light off

The Firmware Flashing was successful.

Remark: you can use mechanical key to set the terminal into firmware updating process when you have no Authorization Card or Programming Card.