


## Wall hung urinal with sensor

Item: 588.82.426

1. First, Use only one screw to fix the hangers on the wall as the drawing mark.
2. Second, fix the flushing magnetic valve on the position as below drawing.
3. Third, Hang up the urinal first and check if the waste outlet align with the waste pipe or not, if not align, adjust the drainage pipe, check again and use another screw to fix the hangers firmly.
4. Then fix sprayer end and gasket, connect magnetic valve and sprayer with flexible hose, connect angle valve and cable of sensor as well.
5. Hang up urinal with all spare parts assembled, check leakage.
6. Applied silicon sealant along external edge of the urinal.
7. Please noted that the magnetic valve used 4 "AA" alkaline batteries only , AC power connection is forbidden.

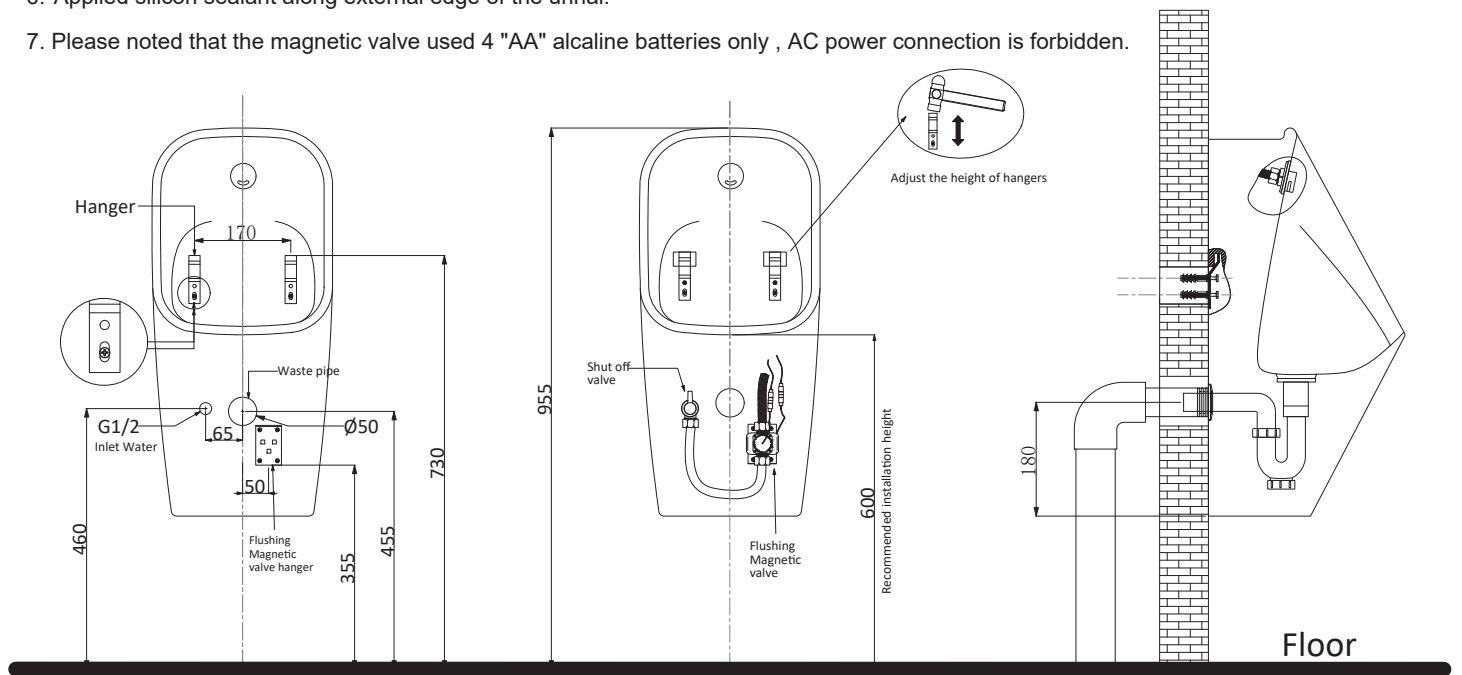

### Notics :

1. The dimensions above are just for reference.
2. Recommended dimensions for installation only, please adjust according to actual situation.